


BCG Channel Bracket

12-13mm

Includes fixings for wall fix		
Panel thickness	ANODISED	PPC
12-13m	BCG1A	BCG1P

Includes fixings for fascia fix		
Panel thickness	ANODISED	PPC
12-13m	BCG2A	BCG2P

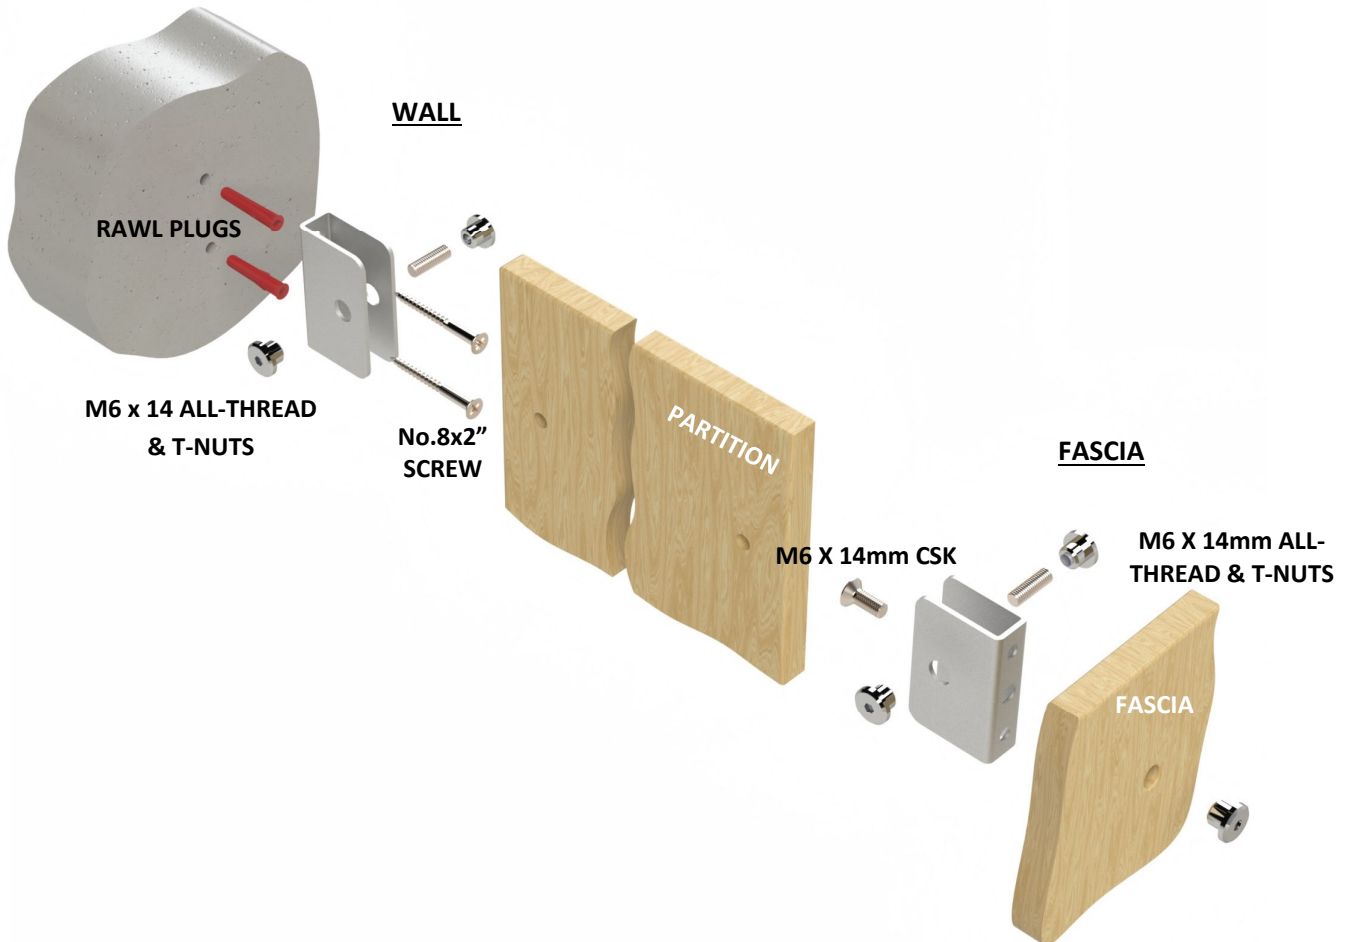

WALL

1. Mark off the centreline position on the wall.
2. Determine the position of the brackets on the centreline and mark the two hole positions per bracket.
3. Drill the holes $\text{\O}5.5$ to a minimum depth of 50mm.
4. Insert the six 32mm plastic plugs into the holes.
5. Secure the brackets to the wall plugs using the No.8 x 2" screws provided.
6. Set the panel into the wall brackets ensuring the height and level are correct.
7. Drill through the pre-drilled brackets using a $\text{\O}10\text{mm}$ drill.
8. Secure the panel to the brackets using the T-nuts and all-thread provided as shown above.

FASCIA

1. Mark off the centreline position on the back face of the fascia.
2. Determine the position of the brackets on the centreline and mark the central hole positions per bracket.
3. Drill the holes through $\text{\O}10\text{mm}$
4. Secure the brackets to the fascia the M6x14mm CSK screws provided.
6. Set the panel into the Fascia brackets ensuring the height and level are correct.
7. Drill through the pre-drilled brackets using a $\text{\O}10\text{mm}$ drill.
8. Secure the panel to the brackets using the T-nuts and all-thread provided as shown above.