


# MODESTY PANEL KIT

12mm + 17-21mm

Individual Components	
Description	Code
4.0m Post PPC	FC1P
Fixing Feet (Pair)	FCFEETP

Bracket Options (pack of 3)	
Panel thickness	Code
12-13mm	CPOAK01BCGP01
17-21mm	CPOAK01B319BB1P

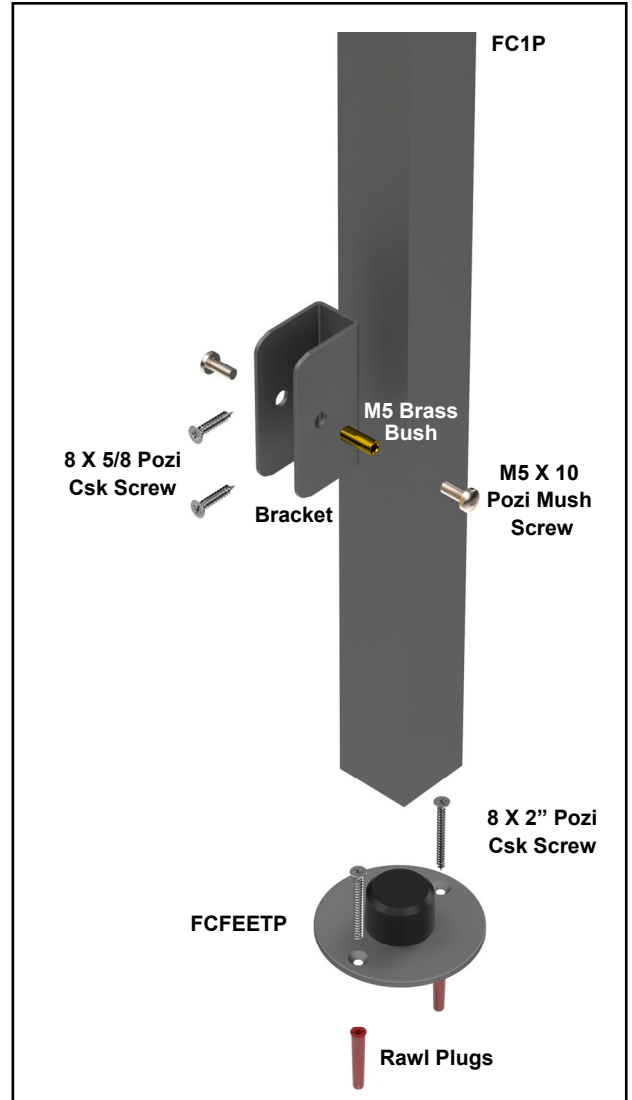

1. Mark off the centreline on the wall and fit the brackets. Secure the panel to the wall brackets. (refer to B3 fixing Instructions if required.)
2. Determine the height of the floor to ceiling column and cut to length.
3. Using a 3.7mm drill bit pilot drill the bracket fixing holes on the post and secure the brackets in place with the No.8 x 5/8" Screws provided.
4. Offer the post up to the panel and mark the position for the feet on the floor and ceiling.
5. If using rawl plugs use a 5.5mm masonry bit to predrill to a depth of at least 50mm
6. Fit the rawl plugs if required and screw the post in place at the top and base.
7. Drill through the brackets into the panel with a 10mm drill bit and secure in place with the CSK T-Nut and M6 Socket screws provided.